


CLASS - AC4 (Abrasion Class)

COATING - FOUR SIDE WAX COATING

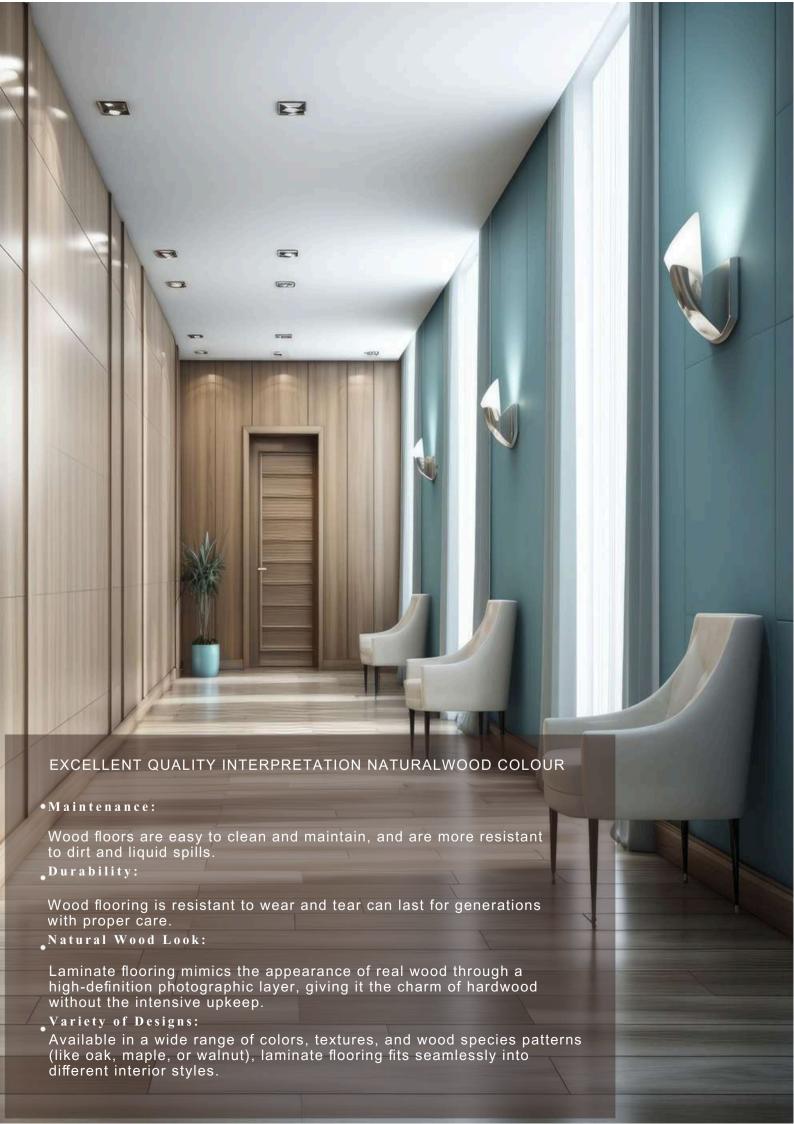






LAMINATE WOODEN FLOORING

| Dimensions | 1220X200X8MM |
|---------------|-------------------------------|
| Package | 10Pcs/Box |
| Box Weight | 17.2 kg |
| Area Coverage | 26.264 sqft/Box (2.44 m2/ctn) |

REDUCER

| Dimensions | 2400X45X12MM |
|------------|--------------|
| Package | 20 Pcs |

STRUCTURE

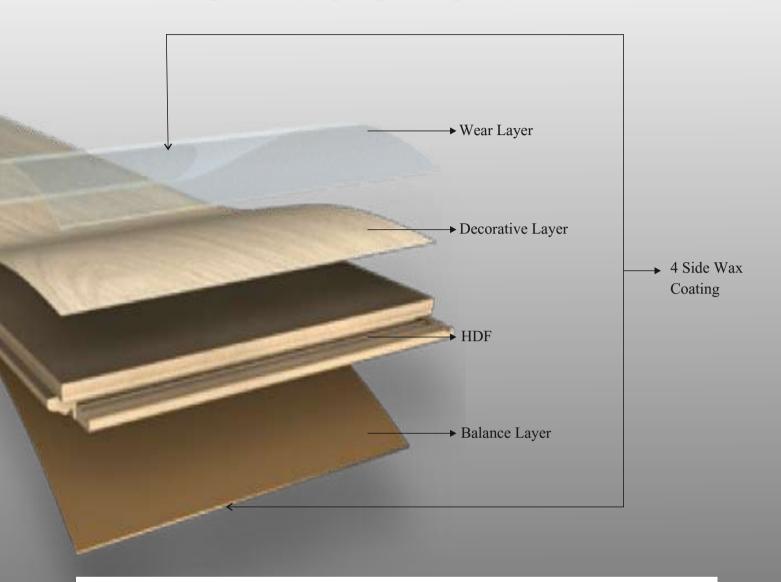





































The most advanced synchronized textures bringing to life natural wood finishes.

SYNCHRONISED TEXTURES



Patented wax protection process across all joints to prevent swelling of the flooring due to moisture.



UNIFORM PLANK

Uniform plank sizedesigned todeliver a cohesive, sophisticated look that suits every space with timeless charm.



Adhesive free laying & dismantling system for easy installation & moving whenever required.



Flat Groove effect is specially colored to give the entire floor the same feel & look.



PRODUCTION

One of the largest manufacturing lines in the world for laminate flooring under one roof.



24HR WATERLOCK TECHNOLOGY



ABRASION-RESISTANT


The highest abrasion class available worldwide of AC4 for all the floors.

Maid - Free

Enjoy our beautiful low maintenance floors.



Pigments with UV resistance of 6+ on the blue wool scale, assuring colour fastness for years.

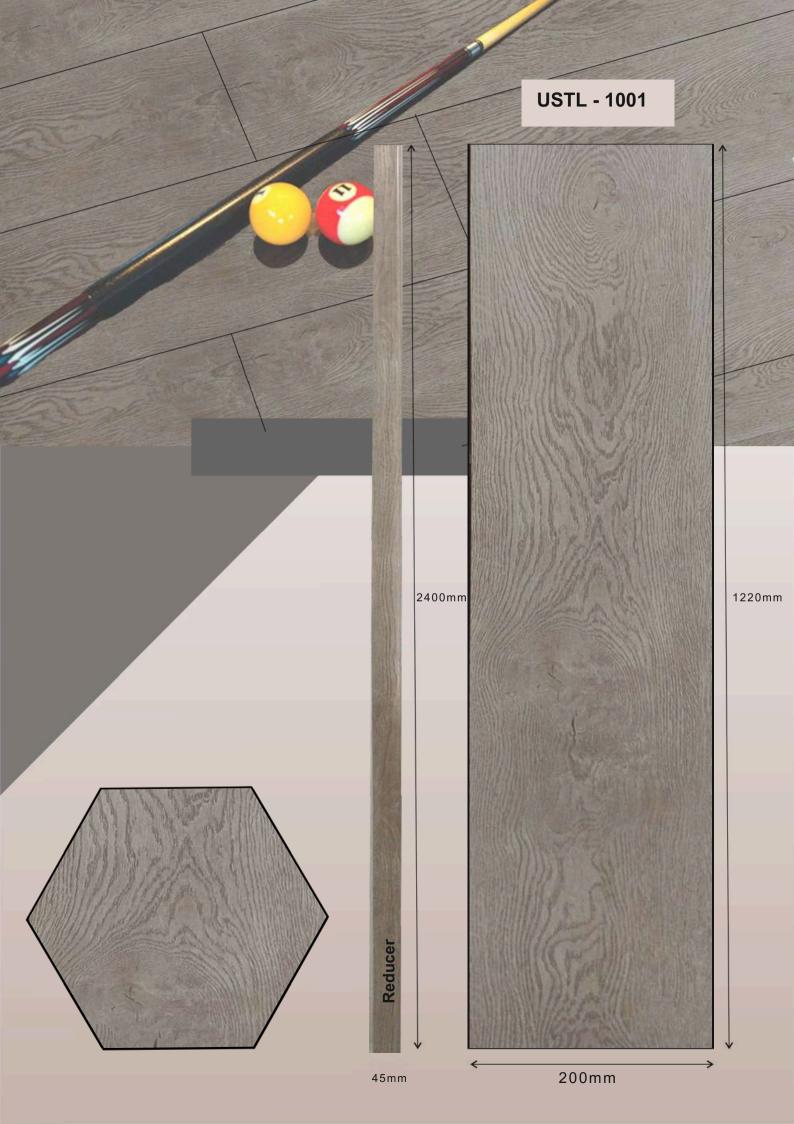
















Double Click System

Reducer

Wooden Flooring



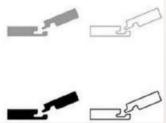





Commercial Area

Residental Area






WOODEN LAMINATE FLOORING INSTALLATION

















WOODEN FLOORING INSTALLATION STEPS

Step 1: Choose Installation Type

Pick eitherclick(floating)orglue-downmethod.

Step 2: Prepare Subfloor

Make sure it'sclean, level, and stable. Fix loose parts.

Step 3: Choose Underlay or Glue

Select based on yourmethod Usedamp-proof, noise-reducing underlay

Step 4: Gather Tools

Get tools likeahammerandsawbefore starting.

Step 5: Install Underlay

Roll underlay closetothe walllayonerowata time use flap/strip or adhesive tape

Step 6: Lay Wooden Floor

Measure and markrowsmix planksto avoidpatterns start from the ongest wall leave 30 cm gap between end joints

Step 7: Saw Planks

Cut planks to fit space. Marklines and cut with top side up.

Step 8: Finish in Style

Add skirting boards and finishing touches to complete the look.



Product Colour May Slightly Vary Due to Photographic Lighting Sources or Your Monitor Settings

We strive to provide our customers with accurate and detailed product representations. However, we wish to bring to your attention that the color of the products displayed on our website or in marketing materials may slightly vary from the actual product due to photographic lighting sources and individual monitor settings

Photographic Lighting Sources

Our product images are captured under controlled studio lighting conditions to showcase the item's features and design. While we make every effort to ensure that the colors depicted are as true to life as possible, the intensity, direction, and temperature of lighting during photography may affect the perception of colors in the images



WALLANTICS

INSPIRING DESIGN'S